

IDEAL FLEXPOST BOLLARD ANCHORING INSTRUCTIONS FOR CONCRETE

Tools Required:


- Marker / Wax Pencil
- High Speed Power Drill
- 1/2" Masonry Drill Bit
- Socket Wrench with 3/4" drive

Parts Included:


- 1 Base Plate
- 4 Concrete Wedge Bolts

NOTE: THIS PRODUCT IS NOT INTENDED TO BE USED ON ASPHALT

WARNING: MUST ANCHOR UNIT ON THE SAME LEVEL AS THE PARKING LOT FOR PROPER FUNCTIONALITY

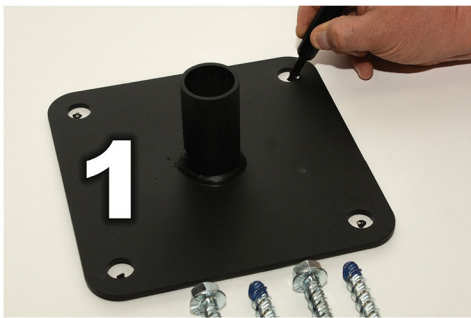

- Place base plate in desired anchoring location
- Mark the four base holes with a wax pencil

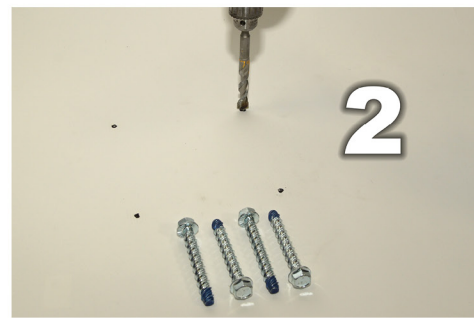

- Using a 1/2" masonry bit, drill 5" in depth



- Place the base plate over the four holes and use a socket wrench with a 3/4" drive to thread all four bolts



- Tighten all 4 bolts so the base plate is flush with the concrete.



2525 Clark St.
Detroit, MI 48209
1-866-825-8659 • www.idealshield.com