SITE EXPERTS
Safeguarding Your Image

(262) 346-8451
JPSITEEXPERTS.COM
JPSIGNSANDSAFETY.COM

Pyramid Sign Base Installation Instructions

Tools Needed: Two 3/16" Allen Wrench

Step #1: For Sign Bases with wheels: Use a Phillips screwdriver or power drill to install the wheels to the side of the sign base.

Step #2 Once the wheels are in place, insert the pole, making sure it is set on the interior nub. If post hole does not line up exactly with sign base hole, lift post 1/4" to line up holes before inserting screw.

Step #3: Using two, 3/16" Allen Wrenches (not included), insert screw in designated hole at the top of the base.

Step #4: Move to designated location before filling.

Step #5: Remove cap from top of Sign Base and fill with chosen filler based on your stability needs.

5a: Water: 16 gallons in areas where temperatures freeze, otherwise fill to the top (19 gallons)

5b: Base Gel & Water Mixture: 16 gallons (in freezing temps) or 19 gallons of water otherwise. Used to prevent evaporation or leakage if tipped over. Ignore install instructions on base gel package, follow our filling limits in freeze areas.

5c. Pea Gravel: make sure signpost is installed before filling, use large funnel for easier install.

5d. Sand: make sure signpost is installed before filling, use large funnel for easier install

5e. Concrete: make sure signpost is installed before filling, use large funnel for easier install

Step #6: Once filled, replace cap on top of the sign base.

Sign Base Bracket Installation Instructions

Tools Needed: 5/32" Allen Wrench and Adjustable Wrench

Step #1: Slide sign brackets over signpost, lining up with the holes in the sign

Step #2: Add set screw inserts into bracket holes, using a 5/32" Allen Wrench to tighten into place

Step #3: Place sign on the brackets so screw inserts are through the sign holes

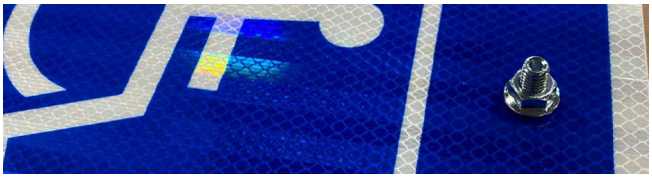

Step #4: Using an adjustable wrench, add hex nuts over the screw inserts to lock the sign into place